

ReSound LiNX Quattro™

User guide

ReSound Behind-The-Ear hearing aids

GN Making Life Sound Better

resound.com

Hearing aid information

Left hearing aid			Right hearing aid		
Serial number			Serial number		
Model number			Model number		
Battery type	□ 312	□ 13			

Program	Веер	Description
1	One beep	
2	Two beeps	
3	Three beeps	
4	Four beeps	

Table of Contents

Introduction	5
Your hearing aid	6
How to get your hearing aid ready for use	8
How to place the hearing aids in your ears	12
How to remove the hearing aids from your ears	14
How to use your hearing aids	15
Direct Audio Input	20
Advanced options	22
How to clean and maintain your hearing aids	28
Wireless accessories	33
Tinnitus Management	34
General warnings	42
Troubleshooting	44
Warnings to hearing care professionals (US only)	46
Regulatory information	48
Hearing aid variants	53
Technical specifications	54
Additional information	57

Introduction

Thank you for choosing ReSound hearing aids. We recommend that you use your hearing aids every day. This way you will fully benefit from them.

NOTE: Read this booklet carefully before you start using your hearing aids.

Intended use

Generic air-conduction hearing aids are wearable sound-amplifying devices intended to compensate for impaired hearing. The fundamental operating principle of hearing aids is to receive, amplify, and transfer sound to the eardrum of a hearing impaired person.


For devices including a Tinnitus Sound Generator module

The Tinnitus Sound Generator module is a tool to generate sounds to be used in a Tinnitus Management Program to temporarily relieve patients suffering from Tinnitus. The target population is primarily the adult population over 18 years of age. This product may also be used with children 12 years of age or older.

Your hearing aid

88 and 77 models

- 1. Thin tube
- 2. Open dome
- 3. Microphone inlets
- 4. Push button
- 5. Volume control
- 6. Battery compartment
- 7. Direct Audio Input
- 8. Battery door lock (optional)

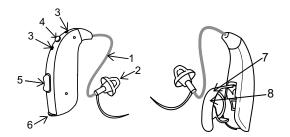


The hearing aids in the illustrations are shown with a thin tube and an open dome, but they can also be fitted with other types of domes/earmoulds:



67 model

- 1. Thin tube
- 2. Open dome
- 3. Push button
- 4. Microphone inlets
- 5. Battery compartment

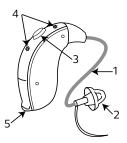

The hearing aids in the illustrations are shown with a thin tube and an open dome, but they can also be fitted with other types of domes/earmoulds:



How to get your hearing aid ready for use

Battery warnings



WARNING: Batteries contain dangerous substances and should be disposed of carefully in the interest of your safety and for the environment. Please note:

- 1. Keep hearing aid batteries away from pets, children and people with cognitive, intellectual or mental health challenges.
- 2. Never put a hearing aid battery in your mouth.
- Never swallow batteries nor place them inside any part of the body, as the battery can cause serious injuries. If a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- 4. Do not recharge zinc-air batteries they may leak or explode.
- 5. Do not attempt to dispose of batteries by burning them.
- 6. Used batteries are harmful to the environment. Please dispose of them according to local regulations or return them to your hearing care professional.
- 7. Batteries may leak. Remove the battery if you leave the hearing aids unused for longer periods.
- 8. If the batteries are not inserted correctly, the device will not work and the batteries may build up heat. If this happens, please remove the batteries.




NOTE:


• Always use new zinc-air batteries that have a minimum remaining shelf life of one year.

How to change the battery

- Prepare the new battery. Remove 2. the protective foil to activate the battery - wait for **two minutes** before inserting the battery into 3. the hearing aid.
- Open the battery door completely using your fingernail.
 - 3. Remove the used battery.
- Insert the new battery with the positive side (+) facing upwards. Always insert the battery in the door, never directly into the hearing aid.
- 5. Close the battery door.







1 NOTE: Please observe the following:

- To save battery power, turn off your hearing aids when they are not in use.
- At night, switch off the hearing aid and open the battery door completely to allow moisture to evaporate. This prolongs the hearing aid's lifespan.
- If the hearing aid frequently loses connection with wireless accessories, contact your hearing care professional for a list of appropriate batteries.


Battery door lock

If the hearing aid is going to be used by a child or a mentally disabled person, you can ask your hearing care professional to make a battery door lock available for you. You can turn the hearing aid on and off as you usually do, but you will have to unlock the battery door every time you need to change the battery.

How to use the battery door lock

To lock the battery door:

1. Open the battery door to the OFF position.



2. Use the tool provided with your battery door lock to push the slider from the left side to the right side.



To unlock the battery door simply repeat the same procedure but pushing the slider to the right instead. You can now change the battery as described in How to change the battery.

1

NOTE: The battery lock is not available for 67 models.

Low battery warning

When the batteries are low on power, your hearing aids reduce the volume, and play a melody every 15 minutes until they are completely drained and turn off.

Low battery indicator when paired with wireless accessories (optional)

The batteries drain faster when you use wireless functionalities like direct streaming from your smartphone or streaming sound from your TV with our TV Streamer. When the batteries deplete, the support of some wireless accessories shut down. Full functionality returns when you insert a new battery. The table below shows how the functionality changes with the battery level.

Battery level	Signal	Hearing aid	Remote control	Streaming
Fully charged		\checkmark	\checkmark	\checkmark
Low	••••	\checkmark	~	x
Depleted (change battery)	 。	\checkmark	x	x

How to place the hearing aids in your ears

How to tell left from right

If you have two hearing aids, they may be programmed differently. One for your left ear, the other for your right. Do not swap them. Please pay attention to this when cleaning, storing and inserting the hearing aids.

You might want to ask your hearing care professional to mark your hearing aids with a coloured Left and Right indication: Left is blue and Right is red.

Inserting earmoulds into your ears

- Hold the earmould between your thumb and index finger and position its sound outlet in your ear canal.
- 2. Slide the earmould all the way into your ear with a gentle, twisting movement.
- 3. Turn the top part of the earmould gently backwards and forwards so it tucks behind the fold of skin above your ear canal. Move the earmould up and down and gently press it to place it correctly in the ear.
 - A C

4. Place the hearing aid firmly behind the ear and make sure it sits securely.







NOTE: It may be helpful to pull your ear up and outward with your opposite hand during insertion. By experimenting, you may discover an easier method.



CAUTION: Never attempt to modify the shape of the hearing aid, earmoulds or tubing yourself.

How to remove the hearing aids from your ears

- 1. Lift the hearing aid from behind the ear
- 2. Using your thumb and index finger, take hold of the earmould (not the hearing aid or the tubing)
- 3. Gently twist and pull the earmould to remove it from the ear


How to use your hearing aids

How to adjust the volume

Your hearing aid automatically adjusts the volume depending on your listening situation.

However, if your hearing aid has a volume control, you can adjust the volume according to your preferences.

- 1. To increase the volume, briefly press the **top** part of the button.
- 2. To reduce the volume, briefly press the **bottom** part of the button.



When you change the volume, the hearing aid responds with a beep. When you reach the upper or lower limits, the hearing aid responds with a low-pitched beep.

٢	•	٦
L	Ť	
L		


NOTE: Not available for 67 models.

- If you have two hearing aids with the Synchronised Volume Control function enabled, volume control
 adjustments to one hearing aid automatically repeat in the second hearing aid. When you change the
 volume in one of the hearing aids, it responds with one or more beeps. A beep in the second hearing
 aid follows.
- Your hearing care professional can disable the volume control or replace it with a non-functional cover.

How to change program

Your hearing aid has a push button which allows you to select from several listening programs.

Push the button to change program. You will then hear one or more beeps. The number of beeps indicates which program you have selected (one beep = program 1, two beeps = program 2 and so on).



You can also change programs using our wireless acessories and smartphone apps.



NOTE:

If you have two hearing aids with synchronisation enabled, a change of program on one hearing aid automatically applies to the second hearing aid as well. The same number of beeps will then sound in the second hearing aid. • When you turn the hearing aids off and on again, they always start up in program 1 and your pre-set volume level.

Telephone use

Your hearing aid allows you to use your telephone as you normally do. Finding the optimal position for holding the phone may require practice.

The following suggestions may be helpful:

- 1. Dependent on your fitting and hearing status, either hold the telephone up to your ear canal or hold it close to the hearing aid microphones as illustrated
- 2. If whistling occurs, try holding the telephone in the same position for a few seconds as the hearing aid may be able to cancel the whistling
- 3. Holding the telephone slightly away from the ear can also stop any whistling





NOTE:

 Depending on your needs, your hearing care professional may activate a function specifically for telephone use.

Telecoil

Your hearing aid may have a telecoil. The Telecoil function may help to improve understanding of speech with Hearing Aid Compatible (HAC) telephones and in theatres, cinemas, houses of worship, etc. that have a hearing loop installed.

When you select the Telecoil program, your hearing aid picks up signals from the hearing loop or HAC telephone. Your hearing care professional can activate the Telecoil program.



- The telecoil does not work without a hearing loop (that is, an induction loop) or a HAC telephone.
- If you are having trouble hearing with the telecoil, ask you hearing care professional to adjust the program.
- If there is no sound from your hearing aids in a hearing loop system with an active Telecoil function, the hearing loop system may not be turned on or may not be operating correctly.
- The sound from the hearing loop and the hearing aids' microphones can be mixed according to your preference. Ask your hearing care professional for more details.

HAC telephone

Some smartphones are hearing aid compatible (HAC). The HAC phone establishes a small hearing loop that your hearing aids can connect to. The telecoil picks up the HAC phone's signal and converts it to sound.

To use a HAC phone, follow these steps:

- 1. Switch your hearing aid to the Telecoil program.
- 2. Pick up the phone and make a call or answer a call.
- 3. Hold the phone close to the hearing aid and tilt it slightly outwards.
- 4. Listen to the dial tone and move the telephone to get the best reception.
- 5. If needed, adjust the volume.
- 6. When you hang up, switch back to your preferred program.

- If the phone has a poor telecoil signal, use the microphone program. To avoid whistling, do not hold the handset too tightly against your ear.
- Ask your hearing care professional to enable the Telecoil programme in your hearing aids.
- If you see a "M3", "M4", "T3", or "T4" on the box, then the smartphone is HAC compliant. If you find it
 difficult to obtain a good result while using your smartphone, your hearing care professional will be
 able to give you advice on available wireless accessories to enhance listening capabilities. Ask your
 hearing care professional for advice regarding HAC smartphones.

Hearing loop systems

To use hearing loop systems, follow these steps:

- 1. Switch your hearing aid to the Telecoil program.
- 2. Find a good spot. Reception is not clear in all locations, it depends on the hearing loop. Look for signs or find another spot.
- 3. If needed, adjust the volume.
- 4. When you leave, switch to your preferred program.

Direct Audio Input

(Optional for model 77)

You can connect a DAI (Direct Audio Input) adapter to the bottom of your hearing aid. Once connected, the hearing aid automatically switches to DAI. The sound is then sent directly to your hearing aid using a cable or a wireless FM system.

If you want to be able to hear what happens around you, you can combine the DAI input with the sounds picked up by your hearing aid's microphones.



NOTE: Your hearing aid's battery will drain faster if you use the DAI functionality.

How to connect a DAI adapter










- 1. Align the tip of your DAI adapter 2. Move the adapter towards the with the groove on top of the battery door. battery door.
- 3. Click the adapter onto the hearing aid.

How to disconnect a DAI adapter



• Remove the adapter from the hearing aid and press the small latch downwards.

🖄 Important points for FM

- Do not use two transmitters on the same FM channel.
- Do not use water or fluids for cleaning the FM click-on receiver.
- Do not use an FM transmitter in locations where it is forbidden to use electronic devices, for instance in airplanes.
- Be aware that FM signals might also be picked up and overheard by other receivers.
- Before using the system in another country, contact your hearing care professional to make sure your radio channel is permitted in that country.
- Your FM boot and transmitter may only be repaired by an authorised service centre.

Advanced options

Phone Now (optional)

If you place a magnet on the telephone receiver, your hearing aids will automatically switch the telephone program on when the receiver is close to your ear. When you remove the receiver from your ear, the hearing aids automatically return to the previous listening program.

1


NOTE: Ask your hearing care professional to enable Phone Now as one of your programs.

Place the Phone Now magnet

Place the magnet on your telephone receiver to allow operation of the Phone Now function. In order to place the magnet properly:

- 1. Clean the telephone thoroughly 2. Remove foil from magnet
- 3. Place the magnet







NOTE: If you are not satisfied with the strength of Phone Now, you can reposition the magnet or add additional magnets.

Prior to placing the magnet on the telephone or cell phone, use a recommended cleaning agent to clean the telephone.

How to use Phone Now

- 1. Lift the telephone to your ear.
- 2. When you hear a short melody, the phone program is active.

1

NOTE: You may need to move the telephone receiver slightly to find the best position for a reliable Phone Now activation and a good hearing experience on the telephone.

If your hearing aids have enabled the Comfort Phone functionality, the hearing aid on the non-phone ear automatically turns down the volume.

Ask your hearing care professional to enable Phone Now as one of your programmes.

Do not cover the loudspeaker opening with the magnet.

If the programme does not work to your satisfaction, moving the magnet to another position may improve ease of use and comfort while speaking.

If the hearing aids do not switch to the telephone programme every time, you can reposition the magnet or add additional magnets.

Use a recommended cleaning agent.

\land Phone Now warnings

- If a magnet is swallowed, seek immediate advice from a medical practitioner.
- Keep magnets out of reach of pets, children and mentally disabled persons.
- The magnet may affect some medical devices or electronic systems. The manufacturer of any magnetically
 sensitive devices (e.g. pacemakers) should advise you regarding appropriate safety precautions when
 using your hearing aid and magnet in close proximity to the medical device or electronic system in question.
 If the manufacturer cannot issue a statement, we recommend keeping the magnet or a telephone equipped
 with the magnet 30 cm (12") away from magnetically sensitive devices (e.g. pacemakers).

🖄 Phone Now precautions

- If you experience frequent signal loss or noise during calls, move the magnet to another place on the telephone receiver.
- Only use magnets supplied by ReSound.

Flight Mode (optional)

Your hearing aid allows you to control it from your smartphone or Remote Control. However, in some areas you are requested to turn off wireless communication.



CAUTION: When boarding a flight or entering an area where RF transmitters are prohibited, wireless functionality must be deactivated.

Follow these steps to turn off wireless mode:

1. For each hearing aid, open and close (open-close, open-close, open-close) the battery door three times within a 10-second period.

2. Double-dings for ten seconds (, etc.) indicate that your hearing aid is in Flight mode.

I NOTE: Both hearing aids must be set in Flight mode - even with synchronisation enabled.

Follow these steps to activate wireless mode:

- 1. For each hearing aid, open and close the battery door once.
- 2. Your hearing aids are in wireless mode after 10 seconds.

It is important to wait an additional 15 seconds after wireless function resumes before opening and closing the battery compartment again for any reason. Flight mode will resume if you open and close the battery compartment during this 15 second window.

Mobile phones

Your hearing aids comply with the most stringent Standards of International Electromagnetic Compatibility. Any degree of disturbance can be due to the nature of your particular mobile phone or of your wireless telephone service provider.

1

NOTE: If you find it difficult to get a good result while using your mobile phone, your hearing care professional can give you advice on available wireless accessories to enhance listening capabilities.

Using your hearing aids with iPhone, iPad and iPod touch (optional)

Your hearing aids are Made for iPhone, iPad and iPod touch, which allow for direct audio streaming and control from these devices.

Streaming from an Android smartphone (optional)

Some AndroidTM smartphones can stream audio directly to your hearing aids. Your device must be running on Android 10 or newer and it needs to have the Android Streaming for Hearing Aids feature as well.



NOTE: For assistance with pairing and using these products with your hearing aids, contact your hearing care professional.

Using your hearing aid with smartphone apps (optional)

Our smartphone apps are intended to be used with our wireless hearing aids. The smartphone apps send and receive signals from the hearing aids via smartphones.

- Do not disable app notifications
- Install updates to keep the app working correctly
- Only use the app with hearing aids from the same manufacturer. We take no responsibility if the app is used with other hearing aids
- If you want a printed version of the smartphone app user guide, please go to our website at resound.com or consult customer support



NOTE: For assistance with pairing and using these products with your hearing aids, please contact your hearing care professional or visit our support site.



NOTE: If your Bluetooth® enabled Android smartphone does not stream directly to your hearing aids, you are able to answer the telephone if you use ReSound Phone Clip+.

ReSound Assist (optional)

If you have signed up to use ReSound Assist available with your hearing aids, you can allow your hearing aids to be adjusted remotely without having to visit your hearing care professional.

All you need is a compatible mobile device with internet enabled. This allows you to experience unprecedented freedom and flexibility:

- Request assistance remotely to adjust your hearing aids to be a better fit for you.
- Keep your hearing aids up to date with the latest software to ensure the best performance possible.

This service only works if your mobile device is connected to the internet. Your hearing care professional will provide information regarding this option, and how it works with the ReSound Smart 3D[™] app.

For optimum performance, make sure the hearing aids are connected to the ReSound Smart 3D[™] app and placed close to the iPhone, iPad, iPod touch or the Android[™] smartphone before applying the changes.

NOTE: Your hearing aids shut down during the installation and update process.





How to clean and maintain your hearing aids

Care and maintenance

Please follow the advice below to have the best user experience and to prolong the life of your hearing aids.

- 1. Keep your hearing aids dry and clean.
- 2. Open the battery door to dry your hearing aids when you are not wearing them.
- 3. Wipe the hearing aids with a soft cloth after use to remove grease or moisture.
- 4. Do not wear your hearing aids when putting on cosmetics, perfume, aftershave, hairspray, suntan lotion, etc. These might discolour the hearing aid or get into the hearing aid causing damage.
- 5. Do not immerse your hearing aid in any liquid.
- 6. Keep your hearing aids away from excessive heat and direct sunlight. The heat may deform the shell, damage the electronics and deteriorate the surface.
- 7. Do not swim, shower or steam bathe while wearing your hearing aids.

Daily maintenance



NOTE: It is important to keep your hearing aid clean and dry. On a daily basis, clean the hearing aids using a soft cloth or tissue. In order to avoid damage due to humidity or excessive perspiration, the use of a drying kit is recommended.


1


NOTE: Do not use alcohol or any other solvents to clean your hearing aids - the protective coating will be damaged.

Cleaning tools

- 1. Soft cloth.
- 2. Brush for cleaning. Use the brush on all surfaces and orifices. Also use your brush for daily cleaning and battery handling.
- 3. Wire loop. Use the wire loop to clean the earmould.
- 4. Magnet. Use the magnet to lift and replace the battery.

If the microphone inlets are clogged, gently brush across the microphone inlets with the brush.



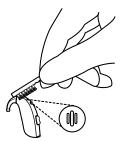



NOTE: Do not use the wire loop to clean the microphone inlets. If the microphone inlets remain clogged after brushing the exterior, ask your hearing care professional to help you clean them.

NOTE: The wire loop is only intended for earmoulds.

How to clean your hearing aid


Wipe your hearing aid clean with a soft cloth after use.



WARNING: Always turn your hearing aids off while cleaning and maintaining them.

The earmould

- 1. Remove the earmould and tubing from the hearing 3. After cleaning, dry the earmoulds thoroughly and aids prior to cleaning.
- 2. Clean the earmould using a mild soap, and rinse with lukewarm water
- remove any residual water and debris from the tubing utilising a small blower and wire loop.





NOTE: Your earmould tubing may become stiff, brittle or discoloured over time. Contact your hearing care professional regarding tube changes.

Thin tubes and domes

- 1. Remove the thin tubes from the hearing aids by unscrewing them counter-clockwise.
- 2. Wipe down thin tubes and domes with a damp cloth.
- 3. In order to clear the thin tube of moisture and debris, push the black cleaning wire through the thin tube, beginning at the opposite end of the dome.



1

NOTE: We recommend that you change the thin tube and dome systems every three months. If the components get stiff or brittle, change them sooner.

Wireless accessories

ReSound's wireless eco-system features a comprehensive range of seamlessly integrated wireless accessories. This allows you to control and stream high quality stereo sound and speech directly to your hearing aids.

Please find the list of available wireless accessories below:

- **ReSound TV Streamer 2** allows you to stream the audio from TV sets and virtually any other audio source to your hearing aids at a volume level that suits you.
- ReSound Remote Control allows you to adjust the volume, mute your hearing aids and change programs.
- **ReSound Remote Control 2** allows you to adjust the volume or mute your hearing aids, change programs, and see settings at a glance on its display.
- **ReSound Phone Clip+** streams phone conversations and stereo sound directly to both hearing aids, and it doubles as a simple remote control.
- **ReSound Micro Mic** is a body worn microphone for your friend or colleague. It significantly improves speech understanding in noisy situations.
- **ReSound Multi Mic** works like the **ReSound Micro Mic** but doubles as a table microphone, connects with loop and FM systems, and has a mini-jack input for streaming audio from a computer or music player.

н
L

NOTE:

- Ask your hearing care professional for more information on the range of ReSound wireless accessories.
- For use of wireless functionality only use ReSound wireless accessories. For further guidance, please refer to the user guide of the relevant ReSound wireless accessory.

Tinnitus Management

Tinnitus Sound Generator module

Your hearing aid includes the Tinnitus Sound Generator (TSG) module. The Tinnitus Sound Generator (TSG) Module is a tool that generates sounds to be used in tinnitus management programmes to temporarily relieve suffering from tinnitus. The TSG can generate sounds adjusted to your personal preference and your specific therapeutic needs as determined by your doctor, audiologist or hearing care professional. Depending on the selected hearing aid program and the environment you are in, you will sometimes hear the therapeutic sound resembling a continuous or fluctuating noise.

Indications for use of the TSG module - (US only)

The Tinnitus Sound Generator module is a tool to generate sounds to be used in a Tinnitus Management Program to temporarily relieve patients suffering from Tinnitus. The target population is primarily the adult population over 18 years of age. This product may also be used with children 5 years of age or older.

The Tinnitus Sound Generator Module is targeted for healthcare professionals, which are treating patients suffering from Tinnitus, as well as conventional hearing disorders. The fitting of the Tinnitus Sound Generator Module must be done by a hearing professional participating in a Tinnitus Management Program.

User instructions for the TSG module

Description of the device

The Tinnitus Sound Generator (TSG) Module is a software tool that generates sounds to be used in tinnitus management programs to temporarily relieve suffering from tinnitus.

Explanation of how the device works

The TSG module is a frequency and amplitude shaped white-noise generator. The noise signal level and frequency characteristics can be adjusted to the specific therapeutic needs as determined by your doctor, audiologist or hearing care professional.

Your doctor, audiologist or hearing care professional can modulate the generated noise with the purpose of making it more pleasant. The noise can then resemble, for example, breaking waves on a shore.

Modulation level and speed can also be configured to your likes and needs. An additional feature can be enabled by your hearing care professional that allows you to select predefined sounds that simulate sounds from nature, such as breaking waves or running water.

If you have two wireless hearing aids that support ear-to-ear synchronisation, this functionality can be enabled by your hearing care professional. This will cause the Tinnitus Sound Generator to synchronise the sound in both hearing aids.

If your tinnitus troubles you only in quiet environments, your doctor, audiologist or hearing care professional can set the TSG Module so that it becomes audible exclusively in such surroundings. The overall sound level can be adjusted via a volume control. Your doctor, audiologist or hearing care professional will review with you the need for having such a control.

For hearing aids where ear-to-ear synchronisation is enabled, your hearing care professional can also enable environmental monitoring synchronisation so that the TSG noise level is automatically adjusted simultaneously in both hearing aids dependent on the background sound level. Additionally, since the hearing aid has a volume control, the background noise level monitored by the hearing aid and the volume control can be used simultaneously to adjust the generated noise level in both hearing aids.

The scientific concepts that form the basis for the device

The TSG module provides sound enrichment with the aim of surrounding the tinnitus sound with a neutral sound which is easily ignored. Sound enrichment is an important component of most approaches to tinnitus management, such as Tinnitus Retraining Therapy (TRT).

To assist habituation to tinnitus, this needs to be audible. The ideal level of the TSG module, therefore, should be set so that it starts to blend with the tinnitus, and so that you can hear both your tinnitus as well as the sound used.

In a majority of instances, the TSG module can also be set to mask the tinnitus sound, so to provide temporary relief by introducing a more pleasant and controllable sound source.

TSG volume control

The sound generator is set to a specific loudness level by the hearing care professional. When switching the sound generator on, the volume will have this optimal setting. Therefore, it might not be necessary to control the volume (loudness) manually. However, the volume control provides the ability to adjust the volume, or amount of stimulus, to the liking of the user. The tinnitus sound generator volume can only be adjusted within the range set by the hearing care professional.

The volume control is an optional feature in the TSG module used for adjusting the sound generator output level.

Using TSG with smartphone apps

The tinnitus sound generator control via hearing aid push buttons can be enhanced with wireless control from a TSG control app on a smartphone or mobile device. This functionality is available in supported hearing aids when a hearing care professional has enabled the TSG functionality during fitting of the hearing aid.

NOTE: To use smartphone apps, the hearing aid must be connected with the smartphone or mobile device.

TSG - Technical specifications

Audio signal technology: Digital.

Available sounds

White noise signal which can be shaped with the following configurations:

High-pass filter	Low-pass filter
500 Hz	2000 Hz
750 Hz	3000 Hz
1000 Hz	4000 Hz
1500 Hz	5000 Hz
2000 Hz	6000 Hz
-	8000 Hz

The white noise signal can be modulated in amplitude with an attenuation depth of up to 14 dB.

\triangle Prescription use of a Tinnitus Sound Generator hearing aid

The TSG should be used as prescribed by your doctor, audiologist or hearing healthcare professional. In order to avoid permanent hearing damage, the maximum daily usage depends on the level of the generated sound.

To adjust TSG, please consult your hearing care professional.

Should you develop any side effects from using the sound generator, such as dizziness, nausea, headaches, perceived decrease in auditory function or increase in tinnitus perception, you should discontinue use of the sound generator and seek medical evaluation.

Children and physically or mentally challenged users will require training by a doctor, audiologist, hearing care professional or the guardian for the insertion and removal of the hearing aid containing the TSG module.

Important notice for prospective sound generator users

A tinnitus masker is an electronic device intended to generate noise of sufficient intensity and bandwidth to mask internal noises. It is also used as an aid in hearing external noises and speech.

Good health practice requires that a person with a tinnitus condition have a medical evaluation by a licensed physician (preferably a physician who specializes in diseases of the ear) before using a sound generator. Licensed physicians who specialize in diseases of the ear are often referred to as otolaryngologists, otologists or otorhinolaryngologists.

The purpose of medical evaluation is to assure that all medically treatable conditions that may affect tinnitus are identified and treated before the sound generator instrument is used.

The sound generator instrument is a tool to generate sounds to be used with appropriate counselling and/or in a tinnitus management program to relieve patients suffering from tinnitus.

🖄 Tinnitus Sound Generator warnings

- 1. Sound generators should be used only as advised by your doctor, audiologist, or hearing care professional.
- 2. Sound generators are not toys and should be kept out of reach of anyone who might cause themselves injury (especially children and pets).
- 3. Sound generators can be dangerous if improperly used.



- 1. Should the user develop any side effects from using the sound generator, such as dizziness, nausea, headaches, perceived decrease in auditory function or increase in tinnitus perception, the user should discontinue use of the sound generator and seek medical evaluation.
- 2. Discontinue use of the sound generator and consult promptly with a licensed physician if you experience one of the following conditions:
 - a. Visible congenital or traumatic deformity of the ear.
 - b. History of active drainage from the ear within the previous 90 days.
 - c. History of sudden or rapidly progressive hearing loss within the previous 90 days.
 - d. Acute or chronic dizziness.
 - e. Unilateral hearing loss of sudden or recent onset within the previous 90 days.
 - f. Visible evidence of significant cerumen accumulation or a foreign body in the ear canal.
 - g. Pain or discomfort in the ear.
- 3. Discontinue use of the sound generator and consult promptly with your hearing care professional, if you experience changes in the tinnitus perception, discomfort or interrupted speech perception, while using the Tinnitus Sound Generator.

- 4. The volume control is a feature in the TSG module used for adjusting the sound generator output level. To prevent unintended usage by paediatric or physically or mentally disabled users, the volume control must be configured to only provide a decrease of the sound generator output level.
- 5. Children and physically or mentally disabled users will require guardian supervision while wearing the TSG hearing aid.
- 6. Adjustment of the Tinnitus Sound Generator settings, using a smartphone app, should only be performed by the parent or legal guardian in cases where the user is minor. Use of the ReSound Assist for remote settings of the tinnitus sound generator, should only be performed by the parent or legal guardian in cases where the user is minor.

$\angle ! \Delta$ Tinnitus Sound Generator warning to hearing care professionals

A hearing care professional should advise a prospective sound generator user to consult promptly with a licensed physician (preferably an ear specialist) before getting a sound generator.

If the hearing care professional determines through inquiry, actual observation, or review of any other available information concerning the prospective user that the prospective user has any of the following conditions:

- 1. Visible, congenital or traumatic deformity of the ear.
- 2. History of active drainage from the ear within the previous 90 days.
- 3. History of sudden or rapidly progressive hearing loss within the previous 90 days.
- 4. Acute or chronic dizziness.
- 5. Unilateral hearing loss of sudden or recent onset within the previous 90 days.
- 6. Audiometric air-bone gap equal to or greater than 15 dB at 500 Hertz (Hz), 1,000 Hz, and 2,000 Hz.
- 7. Visible evidence of significant cerumen accumulation or a foreign body in the ear canal.
- 8. Pain or discomfort in the ear.



CAUTION: The maximum output of the sound generator falls into the range that can cause hearing loss according to OSHA regulations. In accordance with NIOSH recommendations, the user should not use the sound generator for more than eight (8) hours a day when this is set to a level of 85 dB SPL or above. When the sound generator is set to levels of 90 dB SPL or above the user should not use the sound generator for more than two (2) hours per day. In no case should the sound generator be worn at uncomfortable levels.

\land General warnings

- 1. Consult a hearing care professional if you think there may be a foreign object in your ear canal, if you experience skin irritation, or if excessive earwax accumulates with the use of the hearing aid
- 2. Different types of radiation, from e.g. NMR, MRI, or CT scanners, may damage hearing aids. It is recommended not to wear hearing aids during these or other similar procedures. Other types of radiation, such as burglar alarms, room surveillance systems, radio equipment, mobile telephones, contain less energy and will not damage hearing aids. However, they have the potential to momentarily affect the sound quality or temporarily create undesired sounds from the hearing aids
- 3. Do not wear hearing aids in mines, oil fields, or other explosive areas unless those areas are certified for hearing aid use.
- 4. Do not allow others to use your hearing aids
- 5. Hearing aid usage by children or mentally disabled persons should be supervised at all times to ensure their safety. The hearing aid contains small parts that could be swallowed by children. Please be mindful not to leave children unsupervised with this hearing aid.
- 6. Hearing aids should be used only as prescribed by your hearing care professional. Incorrect use may result in sudden and permanent hearing loss.
- 7. Warning to hearing care professionals: Special care should be exercised in selecting and fitting hearing aids with maximum sound pressure level that exceeds 132 dB SPL with an IEC 60711:1981 occluded ear simulator. There may be a risk of impairment of the remaining hearing.
- 8. Turn off your wireless functionality by using the flight mode in areas where radio frequency emission is prohibited
- 9. If a hearing aid is broken, do not use it.

10. External devices connected to the electrical input must be safe according to the requirements of IEC 60601-1, IEC 60065, EN/IEC 62368-1, or IEC 60950-1, as appropriate (wired connection, for example HI-PRO, SpeedLink).

1

NOTE: For use of wireless functionality, only use supported wireless accessories. For further guidance regarding e.g. pairing, please refer to the user guide of the relevant wireless accessory.

⚠ General precautions

- 1. When wireless function is activated, the device uses low-powered digitally coded transmissions in order to communicate with other wireless devices. Although unlikely, nearby electronic devices may be affected. In that case, move the hearing aid away from the affected electronic device
- 2. Use only original parts from the manufacturer, e.g. wax guards.
- 3. Only connect your hearing aids to accessories intended and qualified to be used with your hearing aids.

Hearing aid expectations

- A hearing aid will not restore normal hearing and will not prevent or improve a hearing impairment resulting from organic conditions.
- Consistent use of the hearing aid is recommended. In most cases, infrequent use does not permit you to get full benefit from it.
- The use of a hearing aid is only part of hearing rehabilitation and may need to be supplemented by auditory training and instructions in lip-reading.

Troubleshooting

Issue	Potential cause	Potential solution		
Feedback, "whistling"	Is your earmould or dome inserted correctly in the ear?	Re-insert it.		
	Is the volume very loud?	Reduce the volume.		
	Are you holding an object (e.g. a hat or a phone) close to a hearing aid?	Move your hand away to create more space between the hearing aid and the object.		
	Is your ear full of wax?	Visit your physician.		
No sound	Is the hearing aid turned off?	Turn it on.		
	Is the hearing aid in telecoil mode?	Switch to the microphone program.		
	Is there a battery in the hearing aid?	Insert a new battery		
	Is the battery still good?	Replace with a new battery		
	Is the plastic tube, earmould or dome clogged or broken?	Consult your hearing care professional.		
	Is your ear full of wax?	Visit your physician.		

Issue	Potential cause	Potential solution		
Sound is distorted, spluttering	The battery is dead	Replace it with a new one		
or weak	Is the battery dirty?	Clean it or replace it with a new one		
	Is the plastic tube or earmould clogged or broken?	Consult your hearing care professional.		
	Did your hearing aid get moist?	Use a desiccant (drying kit).		
Battery drains very quickly	Did you leave your hearing aid turned on for long periods of time?	Always turn off your hearing aid when you are not using it.		
	Is the battery old?	Check the date on the battery package.		

⚠ Warnings to hearing care professionals (US only)

A hearing care professional should advise a prospective hearing aid user to consult promptly with a licensed physician (preferably an ear specialist) before dispensing a hearing aid if the hearing care professional determines through inquiry, actual observation, or review of any other available information concerning the prospective user, that the prospective user has any of the following conditions:

- 1. Visible congenital or traumatic deformity of the ear.
- 2. History of active drainage from the ear within the previous 90 days.
- 3. History of sudden or rapidly progressive hearing loss within the previous 90 days.
- 4. Acute or chronic dizziness.
- 5. Unilateral hearing loss of sudden or recent onset within the previous 90 days.
- 6. Audiometric air-bone gap equal to or greater than 15 decibels at 500 Hertz (Hz), 1,000 Hz, and 2,000 Hz.
- 7. Visible evidence of significant cerumen accumulation or a foreign body in the ear canal.
- 8. Pain or discomfort in the ear.

L Important notice for prospective hearing aid users (US only)

Good health practice requires that a person with a hearing loss have a medical evaluation by a licensed physician (preferably a physician who specializes in diseases of the ear) before purchasing a hearing aid. Licensed physicians who specialize in diseases of the ear are often referred to as otolaryngologists, otologists or otorhinolaryngologists. The purpose of medical evaluation is to assure that all medically treatable conditions that may affect hearing are identified and treated before the hearing aid is purchased.

Following the medical evaluation, the physician will give you a written statement that states that your hearing loss has been medically evaluated and that you may be considered a candidate for a hearing aid. The physician will refer you to an audiologist or a hearing care professional, as appropriate, for a hearing aid evaluation.

The audiologist or hearing care professional will conduct a hearing aid evaluation to assess your ability to hear with and without a hearing aid. The hearing aid evaluation will enable the audiologist or hearing care professional to select and fit a hearing aid to your individual needs.

If you have reservations about your ability to adapt to amplification, you should inquire about the availability of a trial-rental or purchase-option program. Many hearing care professionals now offer programs that permit you to wear a hearing aid for a period of time for a nominal fee after which you may decide if you want to purchase the hearing aid.

Federal law restricts the sale of hearing aids to those individuals who have obtained a medical evaluation from a licensed physician. Federal law permits a fully informed adult to sign a waiver statement declining the medical evaluation for religious or personal beliefs that preclude consultation with a physician. The exercise of such a waiver is not in your best health interest and its use is strongly discouraged.

L Children with hearing loss (US only)

In addition to seeing a physician for a medical evaluation, a child with a hearing loss should be directed to an audiologist for evaluation and rehabilitation because hearing loss may cause problems in language development and the educational and social growth of a child. An audiologist is qualified by training and experience to assist in the evaluation and rehabilitation of a child with hearing loss.

Regulatory information

Warranties and repairs

The manufacturer provides a warranty on hearing aids in the event of defects in workmanship or materials, as described in applicable warranty documentation. In its service policy, the manufacturer pledges to secure functionality at least equivalent to the original hearing aid. As a signatory to the United Nations Global Compact initiative, the manufacturer is committed to doing this in line with environment-friendly best practices. Hearing aids therefore, at the manufacturer's discretion, may be replaced by new products or products manufactured from new or serviceable used parts, or repaired using new or refurbished replacement parts. The warranty period of hearing aids is designated on your warranty card, which is provided by your hearing care professional.

For hearing aids that require service, please contact your hearing care professional for assistance.

Hearing aids that malfunction must be repaired by a qualified technician. Do not attempt to open the case of hearing aids, as this will invalidate the warranty.

Temperature test, transport and storage information

Our hearing aids are subjected to various tests in temperature and damp heating cycling between -25 $^{\circ}$ C (-13 $^{\circ}$ F) and +70 $^{\circ}$ C (+158 $^{\circ}$ F) according to internal and industry standards.

During normal operation the temperature should not exceed the limit values of 0 $^{\circ}$ C (+32 $^{\circ}$ F) to +45 $^{\circ}$ C (+113 $^{\circ}$ F) at a relative humidity of 90%, non-condensing. An atmospheric pressure between 500 hPa and 1100 hPa is appropriate.

During transport or storage, the temperature should not exceed the limit values of -20 °C (-4 °F) to +60 °C (+140 °F) at a relative humidity of 90% RH, non-condensing (for a limited time). An atmospheric pressure between 500 hPa and 1100 hPa is appropriate.

Symbols

Be aware of information marked with the warning symbol:



WARNING: Points out a situation that could lead to serious injuries.



CAUTION: Indicates a situation that could lead to minor and moderate injuries.



Advice and tips on how to handle your hearing aid better.



Equipment includes an RF transmitter.



Follow instructions for use.



Manufacturer.



Product is a Type B applied part.



Please ask your local hearing care professional concerning disposal of your hearing aids and accessories.

NOTE: Country-specific regulations may apply.



Complies with ACMA requirements.



Statement

This device complies with part 15 of the FCC rules and ISED rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation.
- 1
- **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules and ISED rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment to an outlet or a circuit different from the one to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications can void the user's authority to operate the equipment.

The products are in compliance with the following regulatory requirements:

- In EU: The device conforms to the Essential Requirements according to Annex I of Council Directive 93/42/EEC for medical devices (MDD).
- Hereby, GN Hearing A/S declares that the radio equipment types BEB60, BEB70 and BEB80 are in compliance with Directive 2014/53/EU.
- The full text of the EU declaration of conformity is available at the following internet address: www.declarations.resound.com.
- In the US: FCC CFR 47 Part 15, subpart C.
- Other identified applicable international regulatory requirements in countries outside the EU and US. Please refer to local country requirements for these areas.
- In Canada: these hearing aids are certified under the rules of ISED.
- Japanese Radio Law and Japanese Telecommunications Business Law Compliance. This device is granted pursuant to the Japanese Radio Law (電波法) and the Japanese telecommunications Business Law (電気通信事業法). This device should not be modified (otherwise the granted designation number will become invalid).

Type designations

Hearing aid type designations for models included in this user guide are:

BEB60, FCC ID: X26BEB60, IC: 6941C-BEB60; **BEB70**, FCC ID: X26BEB70, IC: 6941C-BEB70; **BEB80**, FCC ID: X26BEB80, IC: 6941C-BEB80.

This device includes an RF transmitter which operates in the frequency band of 2.4 GHz – 2.48 GHz.

Hearing aid variants

Behind-the-ear (BTE) hearing aids of type **BEB60** with FCC ID X26BEB60, IC number 6941C-BEB60 and size 312 battery are available in the following variants:

RE567-DWT RE767-DWT RE967-DWT

Nominal RF output power transmitted is: -1 dBm.

Behind-the-ear (BTE) hearing aids of type **BEB70** with FCC ID X26BEB70, IC number 6941C-BEB70 and size 13 battery are available in the following variants:

RE577-DWT RE777-DWT RE977-DWT

Nominal RF output power transmitted is: -2 dBm.

High Power Behind-the-Ear (BTE) hearing aids of type **BEB80** with FCC ID X26BEB80, IC number 6941C-BEB80 and size 13 battery are available in the following variants:

RE588-DWT RE788-DWT RE988-DWT

Nominal RF output power transmitted is: - 2 dBm.

Technical specifications

Mini BTE

Models: RE567-DWT RE767-DWT RE967-DWT

		Thin tube	Closed		Maximum Output (OSPL 90)
Reference test gain (60 dB SPL input)	HFA	36	39	dB	130
Full-on gain (50 dB SPL input)	Max. HFA	52 47	56 49	dB	Output (102 Em) (102
Maximum output (90 dB SPL input)	Max. HFA	123 113	121 116	dB SPL	80
Total harmonic distortion	500 Hz 800 Hz 1600 Hz 3200 Hz	0.4 0.1 0.4 0.2	0.7 0.6 0.6 0.1	%	100 1000 10000 Frequency (Hz) Closed Full-On and Reference Test Gain
Telecoil sensitivity (1 mA/m input) HFA - SPLIV @ 31.6 mA/m (ANSI) Full-on telecoil sensitivity @ 1 mA/m	Max. HFA HFA	81 96 77	85 99 79	dB SPL	Solt SPL inter 5005 SPL inter 5005 SPL inter
Equivalent input noise, w/o noise reduction 1/3 Octave Equivalent input noise, w/o noise reduction		22 10	23 10	dB SPL	
Frequency range (DIN 45605)		100-7800	100-6800	Hz	1000 10000 10000 Frequency (Hz)
Current Drain (Quiescent/Operating)		1.17/1.22	1.18/1.34	mA	Closed

Data in accordance with ANSI S3.22-2014, IEC 60118-0:2015

BTE

Models: RE577-DWT RE777-DWT RE977-DWT

		Open	Closed		Maximum Output (OSPL 90)
Reference test gain (60 dB SPL input)	HFA	40	45	dB	130
Full-on gain (50 dB SPL input)	Max. HFA	52 49	57 52	dB	Output 000 000 000 000 000
Maximum output (90 dB SPL input)	Max. HFA	128 117	126 122	dB SPL	
Total harmonic distortion	500 Hz 800 Hz 1600 Hz 3200 Hz	0.5 0.1 0.6 0.2	0.7 0.9 0.6 0.2	%	100 1000 10000 Frequency (Hz) Closed Full-On and Reference Test Gain
Telecoil sensitivity (1 mA/m input) HFA - SPLIV @ 31.6 mA/m (ANSI) Full-on telecoil sensitivity @ 1 mA/m	Max. HFA HFA	83 101 79	88 105 83	dB SPL	6 Full-ongan 5008 SPI input 6 8 9
Equivalent input noise, w/o noise reduction 1/3 Octave Equivalent input noise, w/o noise reduction		22 10	22 11	dB SPL	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Frequency range (DIN 45605)		100-7170	100-6170	Hz	100 1000 10000 Frequency (Hz)
Current Drain (Quiescent/Operating)		1.18/1.2	1.2/1.29	mA	Closed

Data in accordance with ANSI S3.22-2014, IEC 60118-0:2015

Power BTE

Models: RE588-DWT RE788-DWT RE988-DWT

Reference test gain (60 dB SPL input)	HFA	53	dB	Maximum Output (OSPL 90)
Full-on gain (50 dB SPL input)	Max. HFA	68 62	dB	
Maximum output (90 dB SPL input)	Max. HFA	134 130	dB SPL	Output (Idi Stati)
Total harmonic distortion	500 Hz 800 Hz 1600 Hz 3200 Hz	2.6 0.2 0.5 0.2	%	100 100 100 100 100 100 100 1000 1
Telecoil sensitivity († mA/m input) HFA - SPLIV @ 31.6 mA/m (ANSI) Full-on telecoil sensitivity @ 1 mA/m	Max. HFA HEA	97 113 92	dB SPL	6 5000 5Pulliongan
Equivalent input noise, w/o noise reduction 1/3 Octave Equivalent input noise, w/o noise reduction		23 13	dB SPL	40 So Bidi B SPLinpuk
Frequency range (DIN 45605)		100-5160	Hz	20 100 1000 10000
Current Drain (Quiescent/Operating)		1.18/1.4	mA	Frequency (Hz)

Data in accordance with ANSI S3.22-2014, IEC 60118-0:2015

Additional information

Acknowledgments

Portions of this software are written by Kenneth MacKay (micro-ecc) and licensed under the following terms and conditions:

Copyright ® 2014, Kenneth MacKay. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NOTE: Use of the Made for Apple badge means that an accessory has been designed to connect specifically to iPhone, iPad and iPod touch models, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

© 2022 GN Hearing A/S. All rights reserved. ReSound is a trademark of GN Hearing A/S. Apple, the Apple logo, iPhone, iPad, iPod touch, and Apple Watch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the US and other countries. Android, Google Play and the Google Play logo are trademarks of Google LLC. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.



Notes

Manufacturer according to EU Medical Device Directive 93/42/EEC:



GN Hearing A/S Lautrupbjerg 7 DK-2750 Ballerup Denmark resound.com

Local contacts:

United Kingdom

GN Hearing UK Ltd Unit 13 Talisman Business Centre Bicester OX26 6HR United Kingdom Tel.: +44 1869 352 800 resound.com

Australia

GN Hearing Australia Pty Ltd Suite 1001, Level 1 Julius Avenue North Ryde, NSW 2113 Australia Tel.: (free) 1800 658 955 resound.com

New Zealand

GN Hearing New Zealand Limited Ground Floor, North Entrance 4 Fred Thomas Drive Takapuna, Auckland, 0622 Tel.: (free) 0800 900 126 resound.com



Any serious incident that has occurred in relation to the device should be reported to the Legal manufacturer GN Hearing A/S and the competent authority of the EU Member State in which the user and/or patient is established.

ReSound GN